


### STEP 1

PREPARE THE FOUNDATION FOR THE GABIONS.


BEGIN THE FILTER FABRIC AND PLACE THE GABIONS. INSTALL THE VERTICAL SPIRALS AND THE STIFFENERS.

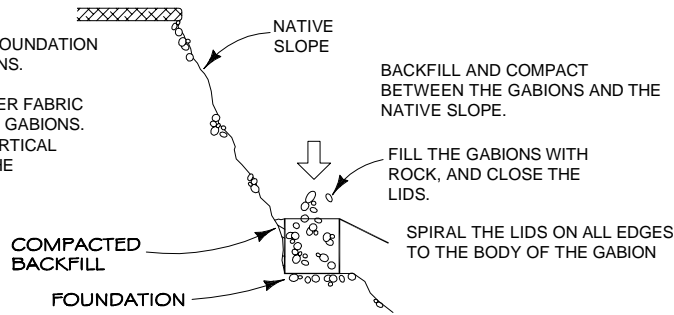

### STEP 2

LOAD SPIRALNAIL WITH FLANGE, INTO THE HAMMER.

DRIVE SPIRALNAILS THROUGH THE GABIONS AND INTO COMPETENT NATIVE SLOPE.

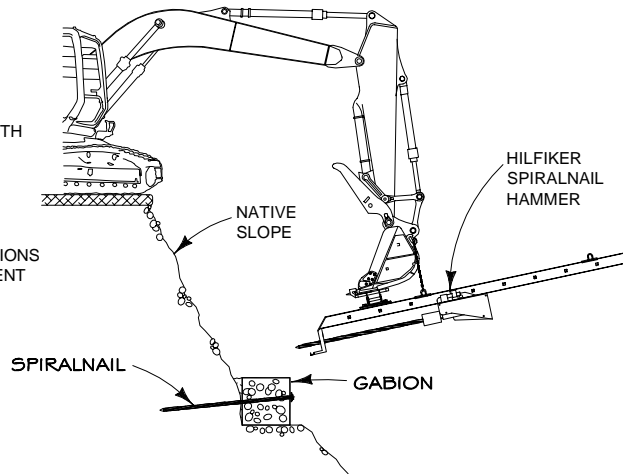


### STEP 3

PLACE THE SECOND LIFT OF GABIONS AND SPIRAL THEM PERMANENTLY TO THE LIFT BELOW.

INSTALL THE VERTICAL SPIRALS AND STIFFENERS IN THE SECOND LIFT.

PLACE THE ROCK, CLOSE AND SECURE THE LIDS.


BACKFILL AND COMPACT CAREFULLY BEHIND THE GABIONS.

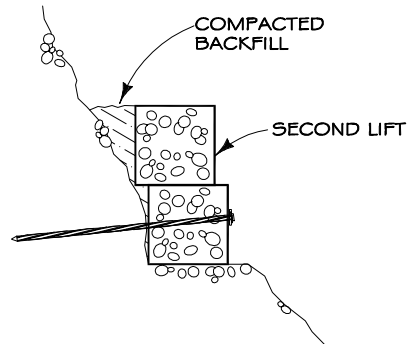

### STEP 4

AS IN STEP 2, LOAD SPIRALNAIL, WITH FLANGE INTO THE HAMMER.


DRIVE SPIRALNAILS THROUGH THE GABIONS AND INTO COMPETENT NATIVE SLOPE.

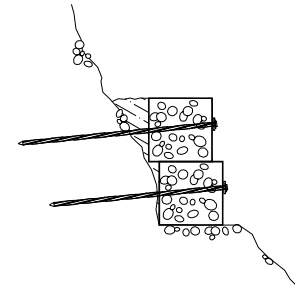

### STEP 5


CONTINUE STEPS 3 AND 4 TO THE TOP OF THE GABION WALL.

BE SURE THE BACKFILL BEHIND THE GABIONS IS COMPACTED FULLY BEFORE DRIVING THE SPIRAL NAILS.

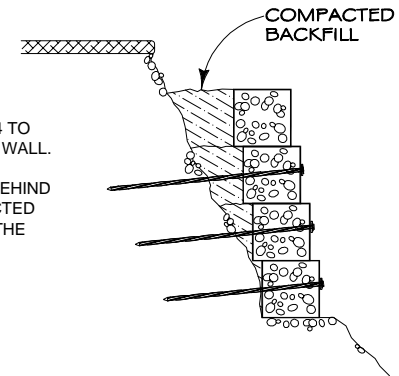

### STEP 6

FINISH THE BACKFILL OVER THE TOP OF THE GABIONS.

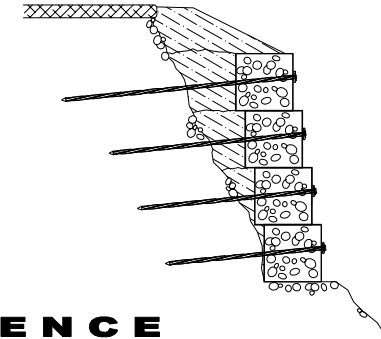

## CONSTRUCTION SEQUENCE