


CONSTRUCTION SEQUENCE

STEP 1

PREPARE THE FOUNDATION FOR THE GABIONS.


BEGIN THE FILTER FABRIC AND PLACE THE GABIONS. INSTALL THE VERTICAL SPIRALS AND THE STIFFENERS.

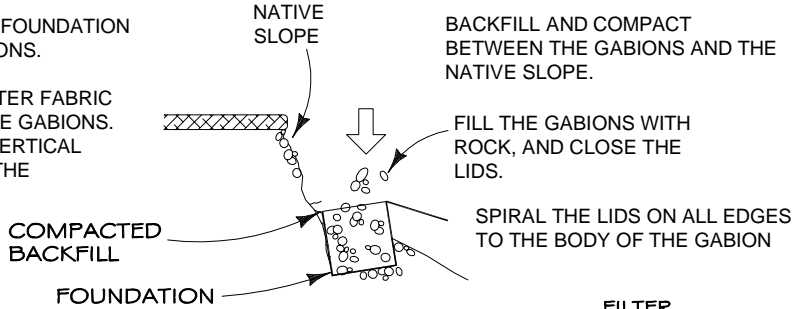

STEP 2

PLACE FILTER FABRIC BETWEEN GABION BASKET AND BACKFILL

BACKFILL AND COMPACT BACKFILL BETWEEN NATIVE AND GABION

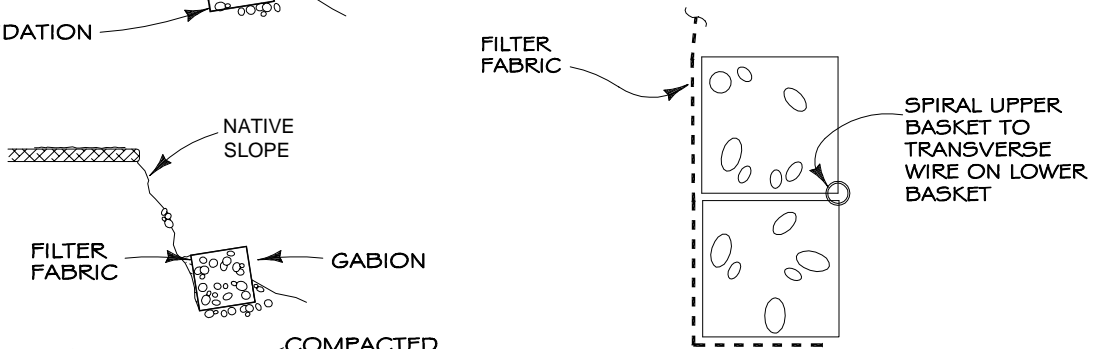


STEP 3

PLACE THE SECOND LIFT OF GABIONS AND SPIRAL BIND THEM PERMANENTLY TO THE LIFT BELOW.


INSTALL THE VERTICAL SPIRALS AND STIFFENERS IN THE SECOND LIFT.

PLACE THE ROCK, CLOSE AND SECURE THE LIDS.

PLACE FILTER FABRIC BACKFILL AND COMPACT CAREFULLY BEHIND THE GABIONS.

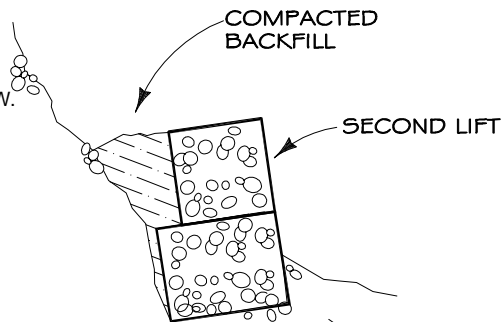


CONNECTION DETAIL

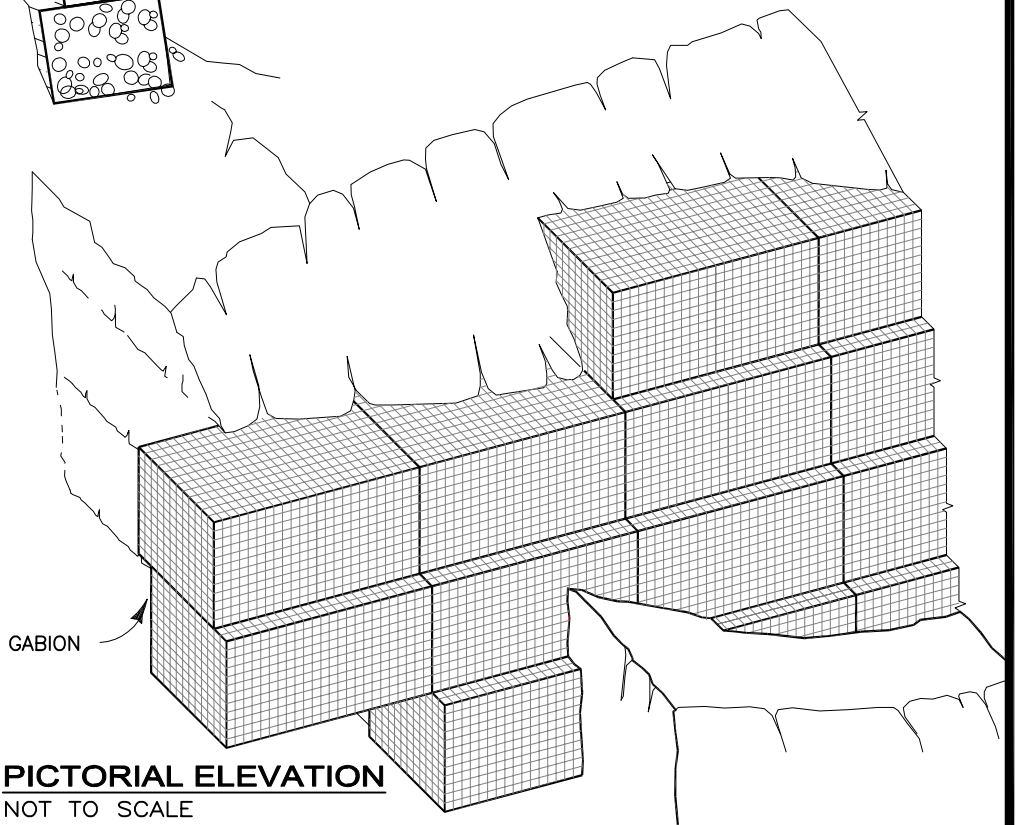


PICTORIAL ELEVATION
 NOT TO SCALE

CESARETTI
Engineered
Solutions
CIVIL ENGINEERING SPECIALISTS


P.O. Box 132
Fortuna, CA 95540
Phone (707) 725-CESR
(707) 498-7193
CesarettiEngineered.com
KCesaretti@att.net

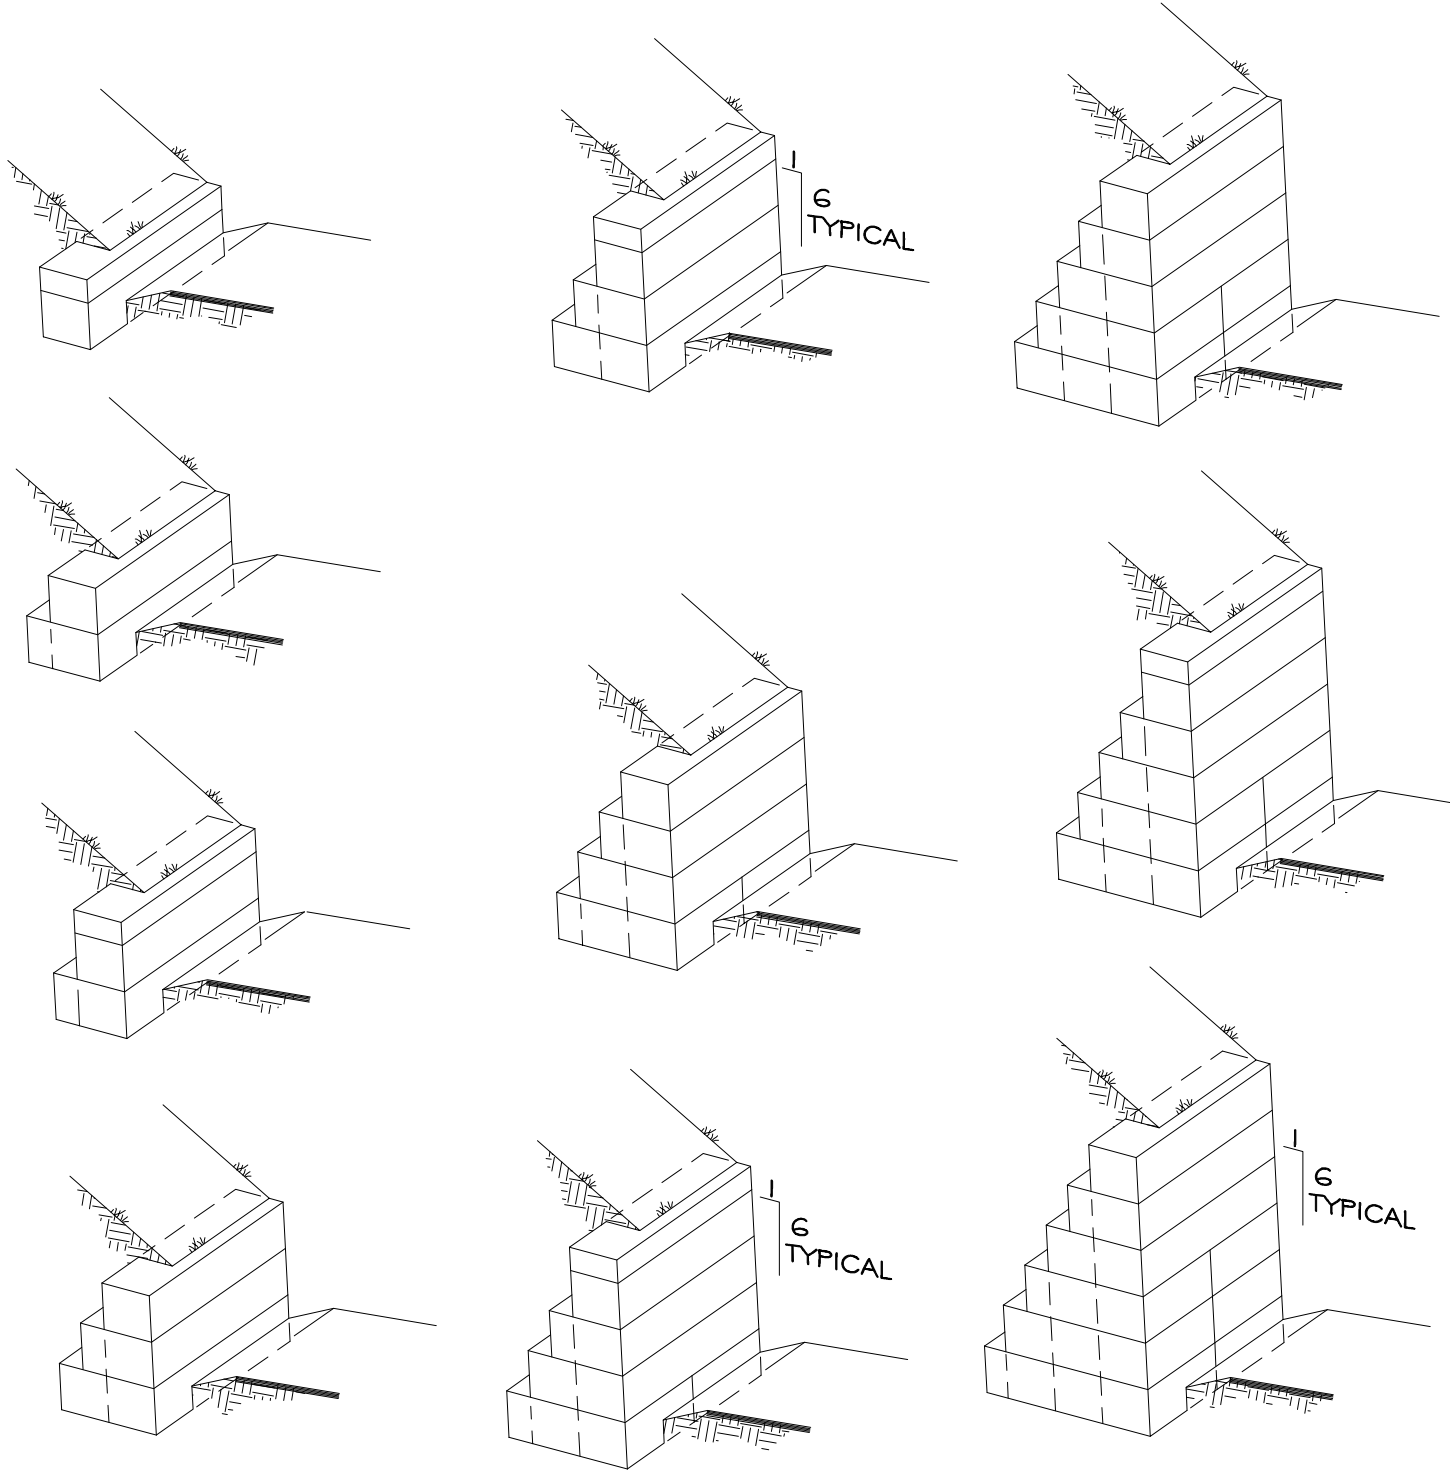

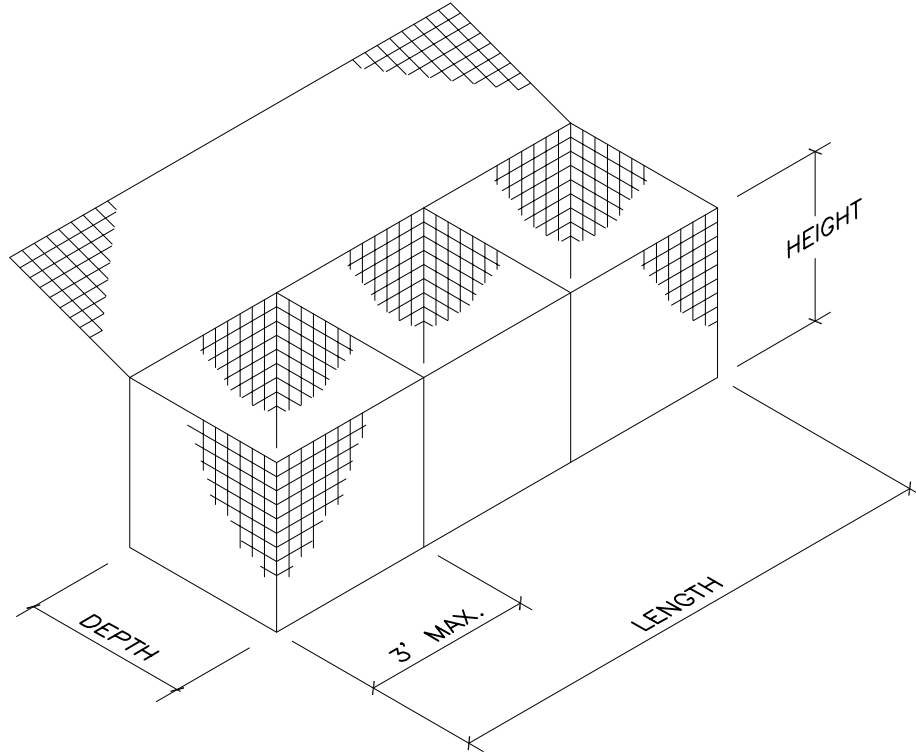

TYPICAL GABION

NOT TO SCALE

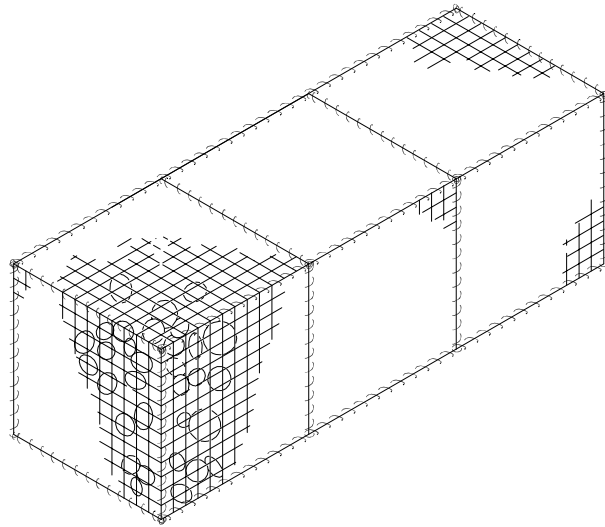

TYPICAL ASSEMBLED GABION

NOT TO SCALE